

## PROFEX II MULTI EFFECTS PREAMP

Edition 1

*Saving to, loading from, and initializing Cache Card 32 RAM cartridges*

- Step 1: Assuming that your cache card is loaded with the steel guitar preset sounds available from the factory or Jeff Newman, insert the card face up (Peavey logo up) into the Ram cartridge slot on the Profex II unit. Ensure that the slide switch on the edge of the Cache Card 32 is moved to the left position as it sits in the Ram cartridge slot. This is the Write Protect position as described in the instruction sheet that comes with the Cache Card 32.
- Step 2: Press the GLOBAL button repeatedly until a screen appears which reads "Save User to Cartridge" on the top line and "Save, Load, and In," which stands for Initialize, on the bottom line. The blinking cursor will be under the "s" of the word "save." However at this point, we want to load from the Cache Card to the internal bank "A" of the Profex II; therefore, you would press the right arrow key twice to place the cursor under the "I" in initialize. **NOTE:** We are initializing the Cache Card so it will work with a Profex II unit at this point. The card should only have to be initialized the very first time that you load from the card to the internal bank "A" of the Profex II. Anytime after that when you are loading from the Cache Card to the bank "A" of the Profex II, you would place the cursor under "Load" to load the steel guitar sounds into bank "A" of the Profex II.
- Step 3: With the blinking cursor under the "L" of "Load," press STORE/EXEC and "Cartridge Load Complete" should be displayed on your screen. Press PLAY twice and the bank "A" should appear on your screen, which is loaded with the identical steel sounds that are on the Cache Card 32. If you will turn the data control or press the DECREMENT button, the "C" bank will appear. The "C" bank will contain all of the steel guitar sounds.

*Saving sounds onto your Cache Card 32 from bank "A" of the Profex II*

- Step 1: Press the global button repeatedly until the screen appears that says "Save User to Cartridge." The blinking cursor is under the "S" at this point. In order to save the internal bank "A" sounds of the Profex II to the Cache Card 32 RAM cartridge, defeat the Write Protect mode on the Cache Card (assuming your blank cache card is inserted into the RAM cartridge slot of the Profex II). To defeat the Write Protect mode of the RAM cartridge, slide the switch on the cartridge to the right as it sits into the RAM cartridge slot of the Profex II. **BEWARE: THIS WILL OVERWRITE ALL SOUNDS THAT ARE LOADED ONTO YOUR CACHE CARD.**

**PROFEX II MULTI EFFECTS PREAMP**  
**PAGE 2**

**Step 2:** Press the STORE button and all of your sounds should be loaded onto your Cache Card 32 at this point. As soon as you have loaded all of the sounds from the Profex memory to the Cache Card, slide the Write Protect switch on the Cache Card 32 to the left. "Store complete" should appear on the screen. In order to check your card, press the PLAY button twice until your preset sounds appear in the display of the Profex II. Turn the data control until you reach the "C" bank. Please keep in mind that there are 127 sounds on each bank; therefore, you may have to turn the data control several times to reach the "C" bank from the "A" bank. When you reach the "C" bank, you will be reading what is placed onto the Cache Card 32. You may pull out your Cache Card 32 at this point and place it in a secure place for future use.

If you should have questions concerning this simple procedure, please contact Mike Brown in the Customer Service Department here at Peavey. Our number is (601) 483-5265.